

## MG1200R 固件说明

1. 请使用 U 盘拷贝固件到根目录，U 盘需要 FAT32 格式，且根目录下同时只能存在一个固件（bin 文件）。
2. 将 U 盘接入灯具 u 盘接口后，打开灯具电源，等待升级进度条完成。
3. 版本号查看方法：进入菜单里灯具信息查看。
4. 版本说明：

版本	更新内容	日期
V1.07	修复色纸问题.	20240930
V1.08	增加功率限制功能	20241207
V1.09	DMX 增强通道新增附件识别控制	20250412

注：详细规格请在官网（[www.godox.com.cn](http://www.godox.com.cn)）下载最新说明书。

## MG1200R Firmware Instructions

1. Please copy the firmware file to the root directory of the USB drive. The USB drive must be formatted to FAT32, and only one firmware (bin file) should exist in the root directory at a time.
2. Insert the USB drive into the USB port on the light and turn on the light. Wait for the upgrade progress bar to complete.
3. To check the version number: Navigate to the menu and view the fixture information.
4. Version details:

Version	What's new	Date
V1.07	1. Fixed an issue related to gel settings.	2024-09-30
V1.08	1. Added power limitation feature.	2024-12-07
V1.09	1. Added accessory identification control function to the enhanced DMX channel.	2025-04-12

**Note: For more details, please download the newest instruction manual on the official website: [www.godox.com](http://www.godox.com).**