 


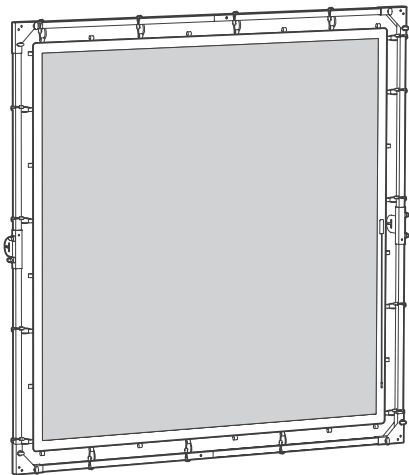

AD88

使用手册

Instruction Manual V1.0

V1.00 固件 Firmware

重要安全说明

使用前请务必仔细阅读本手册，并严格遵守以下安全注意事项。

危险


- 若外壳出现开裂、变形、进液、异味或异常发热等情况，请立即停止使用。
- 仅限使用原厂配件，或经制造商明确推荐的配件；否则可能导致火灾、电击或人身伤害。
- 本设备使用 V 口电池供电，严禁接入手册未指定的电源。
- 电池及配件需置于儿童及婴幼儿接触不到的区域，若发生误吞请立即就医。
- 电池出现漏液、变色、变形、冒烟或异味时，需小心取出防止烫伤，严禁继续使用，以免引发火灾、触电或灼伤。
- 严禁对电池进行改装、加热、焊接操作，严禁使其接触明火、水源或遭受强烈外力撞击。

警告

- 本设备不具备防水防尘功能，禁止在雨天、高湿度、多尘环境中使用。
- 若设备进水或受潮，请立即切断电源，并断开所有连接线缆。
- 严禁在酒精、汽油等易燃易爆气体或液体附近使用本设备。
- 严禁遮挡或堵塞设备散热孔，以防过热引发危险。
- 严禁私自拆卸或改装设备。非授权拆解可能导致电路故障或永久性损坏。如需维修，请联系神牛授权服务中心。

物品清单

 AD88

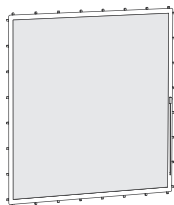

可调柔光片 × 1



控制器 × 1



转接线 × 1

 


延长线 × 1




使用手册 × 1

AD88 K1

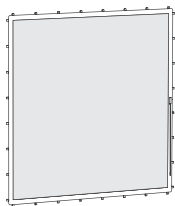

可调柔光片 × 1

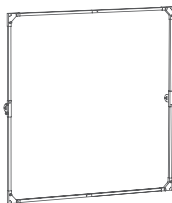 

蝶布框 (F88K) × 1



控制器 × 1



转接线 × 1



延长线 × 1



使用手册 × 1

 
注:

1. 开箱后核对所购套装内的物品, 若有缺失或破损, 及时联系经销商。
2. 图示仅供参考, 具体以实际产品为准。


部件名称

可调柔光片

1. 魔术贴
2. 控制线
3. 支撑带

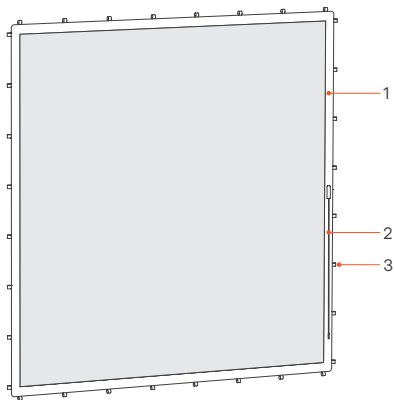

控制器

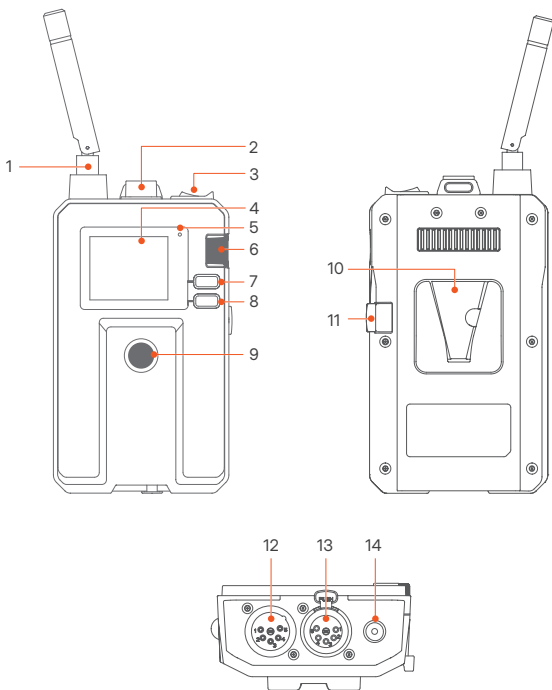 

1. 天线接口

2. 输出接口

3. 电源键

4. 显示屏

5. 无线 DMX 状态指示灯

6. SET 旋钮

7. MODE 键

8. MENU 键

9. 调节拨杆

10. 电池固定座

11. 电池释放键

12. DMX IN 接口

 
13. DMX OUT 接口

14. 输入接口


使用说明

1. 安装


1.1 蝶布框

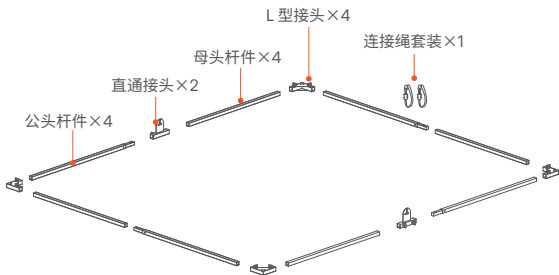

 
拼接杆件① / ②: 公头杆件推入直通接头, 再对准母头杆件推入, 顺时针拧紧接头旋钮, 杆件①即完成; 以同样方式拼接杆件②。

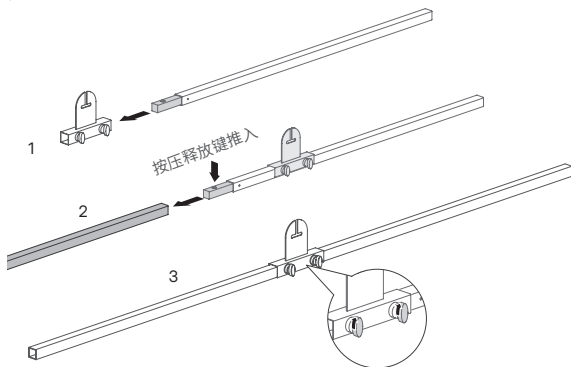

 拼接杆件③ / ④：公头杆件对准母头杆件推入，杆件③即完成；以同样方式拼接杆件④。


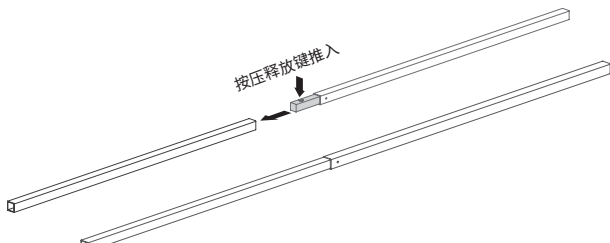


 组装框架：杆件① / ②呈对向摆放，另外两边摆入杆件③ / ④，使四条杆件呈正方形，四角处分别推入 L 型接头并顺时针拧紧接头旋钮。

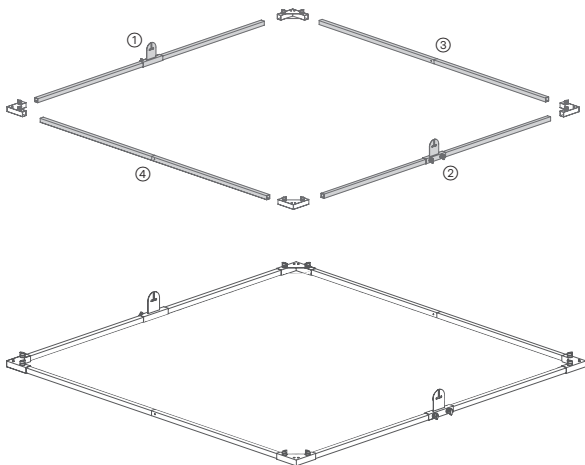


1.2 柔光片

  使用连接绳穿入柔光片支撑带，再扣至蝶布框上即可。

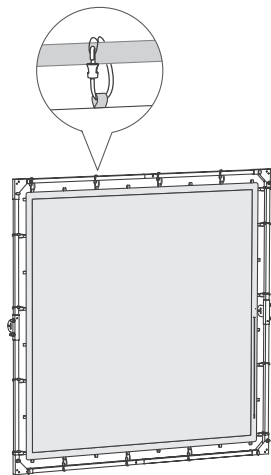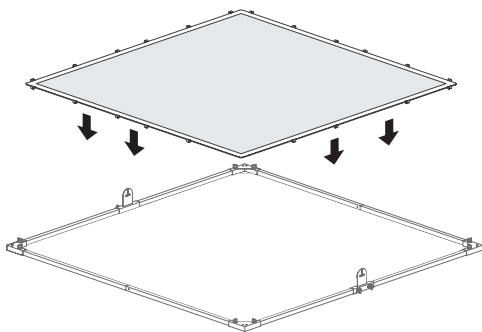

2. 收纳柔光片

 柔光片上放入卷轴，卷叠过程中保持柔光片紧贴卷轴无偏移，卷至末端时贴紧魔术贴固定。

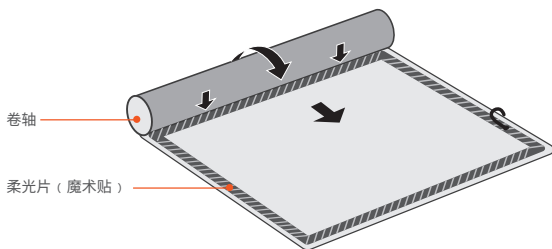


注：

1. 卷轴为配套收纳工具，切勿丢弃。
2. 取出时轻撕魔术贴，严禁用力撕拉；因操作不当导致柔光片折裂、起泡等损坏，不在保修范围内。


3. 供电方式

 准备工作：控制器输出接口与柔光片控制线，通过延长线连接；V 口电池（另购）插入控制器电池固定座。

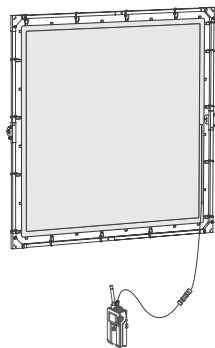


接通电源：V 口电池 D-Tap 口与控制器输入接口，通过转接线连接。

 开机 / 关机：电源键拨至 < **I** > 开机，拨至 < **O** > 关机。

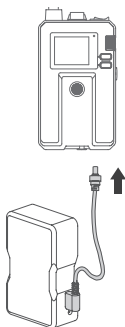


4. DMX 连接

 4.1 无线 DMX

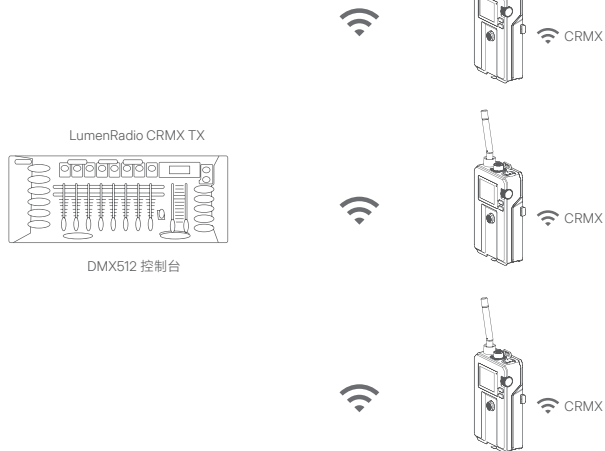

 4.2 有线 DMX

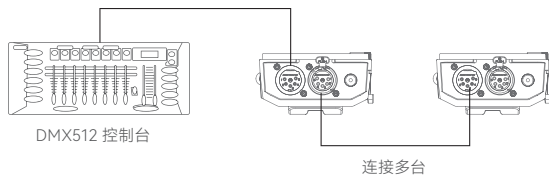

注: 仅展示连接 DMX512 控制台方式, 控制台及连接线需另购。

5. 控制面板操作

部件	操作	说明
MODE 键	短按	进入雾度值调节界面
调节拨杆	上下拨动	增减雾度值 (0% ~ 100%)
MENU 键	短按	进入菜单界面
SET 旋钮	滚动	切换选项或增减参数值
	短按	确认选择或退出当前设置

6. 菜单设置

短按 MENU 键进入菜单界面，滚动并短按 SET 旋钮进入其中一项设置。

图标	功能	选项		说明
	型号选择	AD33		设置已连接柔光片型号
		AD32		
		AD21		
		AD88		
	DMX	地址	001-512	起始地址
		DMX 模式	01: Level 8 Bit	8 位 Level 模式
		RDM 状态	开启	开启后控制台可设置设备地址及 DMX 模式
			关闭	关闭 RDM
		增强通道	开启	开启增强通道信号
			关闭	关闭增强通道信号
	CRMX	CRMX	开启	开启 CRMX
			关闭	关闭 CRMX
		重置		重置 CRMX
		连接状态		/
	蓝牙	开启		开启蓝牙
		关闭		关闭蓝牙
		重置		重置蓝牙
		MAC 码		便于查找设备
	速度调节	1-4 档位		/
	频率调节	默认		/
		1-5 档位		
	屏幕设置	屏幕亮度: 10%-100%		/
	语言	简体中文		设置界面语言
		English		
	系统升级	/		通过 “Godox Light” 应用程序升级
	恢复出厂设置	确定		所有参数还原至出厂默认值
		取消		/
	关于本机	/		查看型号 / 固件版本等信息

7. “Godox Light” 应用程序连接指南

扫描二维码或在应用商店搜索“Godox Light”下载安装。



蓝牙重置

进入菜单 > 蓝牙 > 确认重置。

蓝牙配对

打开应用程序，选择“蓝牙添加”，搜索并连接本设备。

固件升级

在应用程序的设备列表中点击  选择固件升级，将自动检测新版本，请按提示操作。

技术参数

产品名称	可调柔光片
产品型号	AD88
控制器输入接口	12V-20V $\overline{=}$ 35W
控制器输出接口	0V-54V $\sim$
控制方式	DMX/RDM、CRMx、应用程序、控制器控制
蓝牙控制距离	最远 30 米
控制器工作环境温度	-20°C $\sim$ 45°C
尺寸 (不含蝶布框)	柔光片: 2300 $\times$ 2300 mm
	控制器: 83 $\times$ 46 $\times$ 150 mm
净重 (不含蝶布框)	柔光片: $\approx$ 3.7 kg
	控制器: $\approx$ 287 g

注：产品设计与规格如有变更，恕不另行通知。

维护保养

- 清洁前务必关机并断开电源。仅可使用干燥软布擦拭，严禁使用酒精、苯或其他挥发性溶剂。
- 不使用时应关机并断开所有线缆，存放在通风干燥、无强磁场干扰的环境中。

Important Safety Instructions

Read this manual thoroughly before use and strictly observe the following safety precautions.



DANGER

- Stop using immediately if the housing is cracked or deformed, if liquid enters the device, or if it emits a strange odor or becomes abnormally hot.
- Use only original accessories or accessories specified by the manufacturer. Failure to do so may result in fire, electric shock, or personal injury.
- Use only V-mount batteries to power this device. Do not connect to power sources not specified in this manual.
- Keep batteries and accessories out of the reach of children and infants. If swallowed, seek medical attention immediately.
- If the battery leaks, becomes discolored, deformed, emits smoke, or produces an unusual odor, remove it carefully to avoid burns, and discontinue use immediately to prevent fire, electric shock, or burns.
- Do not modify, heat, or solder the battery. Do not expose it to open flame, water, or severe impact.




WARNING

- This device is NOT waterproof or dustproof. Do not use in rain, high humidity, or dusty environments.
- If liquid enters the device or it becomes damp, disconnect the power immediately and remove all cables.
- Strictly do not use near flammable or explosive gases or liquids (e.g., alcohol, gasoline).
- Strictly do not block or obstruct the air vents to prevent overheating.
- Do not disassemble or modify the device without authorization. Unauthorized disassembly may result in circuit malfunction or permanent damage. Contact an authorized Godox service center for repairs.

What's Inside

 AD88

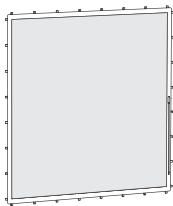

Adjustable Diffusion × 1



Controller × 1



Adapter Cable × 1

 


Extension Cable × 1




Instruction Manual × 1

AD88 K1

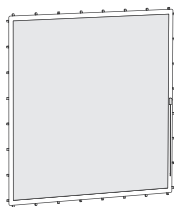

Adjustable Diffusion × 1

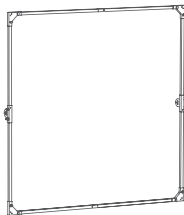 

Butterfly Frame (F88K) × 1



Controller × 1



Adapter Cable × 1



Extension Cable × 1



Instruction Manual × 1

 
Note:

1. Check the package contents after unboxing. If any items are missing or damaged, contact the dealer immediately.
2. Illustrations are for reference only and may differ from the actual product.


Names of Parts

Adjustable Diffusion

1. Velcro
2. Control Cable
3. Support Strap

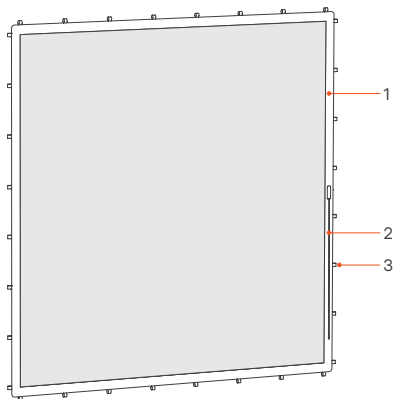

Controller

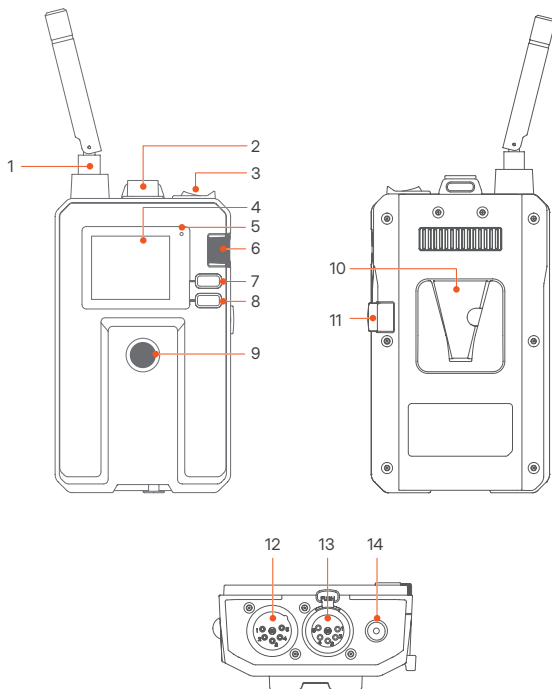 

1. Antenna Interface

2. Output Port

3. Power Button

4. Display

5. Wireless DMX Status Indicator

6. SET Dial

7. MODE Button

8. MENU Button

9. Adjustment Lever

10. Battery Mount Base

11. Battery Release Button

12. DMX IN Port

 
13. DMX OUT Port

14. Input Port


Instructions for Use

1. Install


1.1 Butterfly Frame

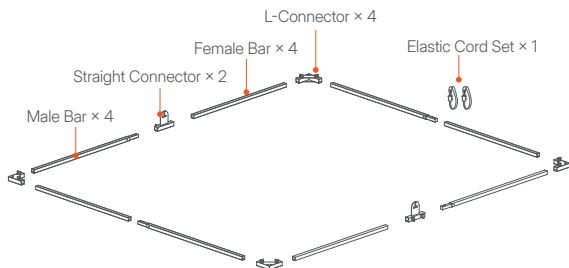

 
Assembling Bars ① & ②: Push the male bar into the straight connector, then align and push it into the female bar. Tighten the connector knob clockwise to complete Bar ①; repeat for Bar ②.

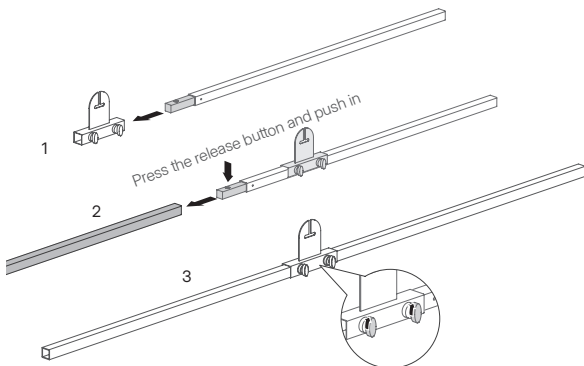

 Assembling Bars ③ & ④: Align the male bar with the female bar and push in to complete Bar ③; repeat for Bar ④.

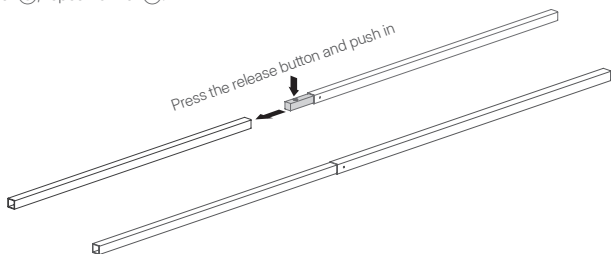


 Frame Assembly: Position Bars ① & ② opposite each other, then place Bars ③ & ④ on the remaining sides to form a square frame. Insert the L-connector into the four corners and tighten the knobs clockwise to secure.

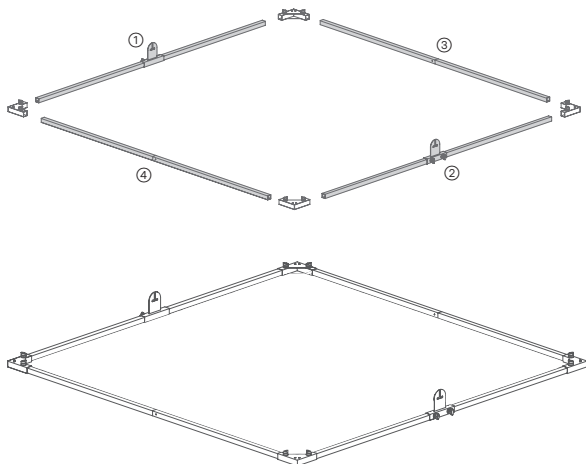


1.2 Diffusion

 Thread the elastic cords through the support straps on the diffusion, then fasten them to the butterfly frame.

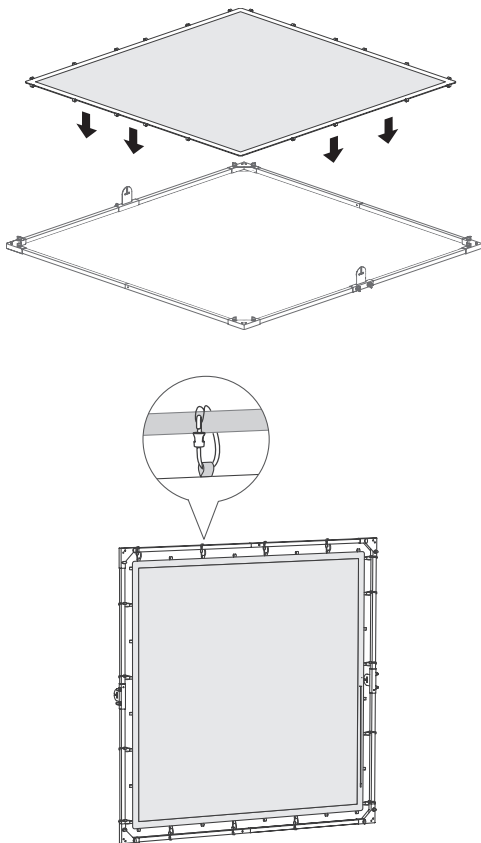

2. Storing the Diffusion

 Place the reel on the diffusion. Ensure the diffusion remains tightly pressed against the reel without misalignment while rolling. Secure with the Velcro once you reach the end of the roll.

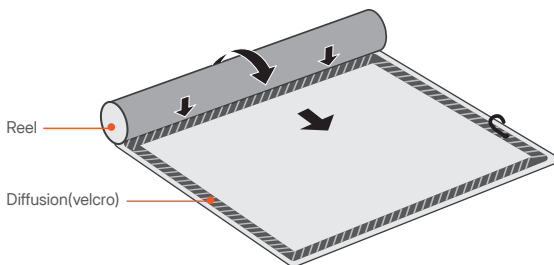


Note:

1. The reel is a dedicated storage tool; do not discard it.
2. Gently peel the Velcro when removing; do not pull with excessive force. Damage such as cracking or bubbling of the diffusion caused by improper operation is not covered under warranty.


3. Power Supply

 Preparation: Connect the controller output port to the diffusion control cable using the extension cable. Insert the V-Mount battery (sold separately) into the controller's battery mount.

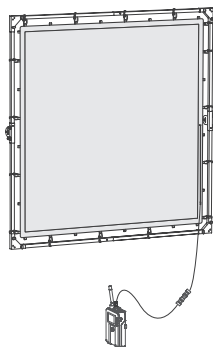


Connecting Power: Connect the V-Mount battery's D-Tap port to the controller input port using the adapter cable.

 Power On / Power Off: Switch the Power button to < I > to turn on; switch to < O > to turn off.

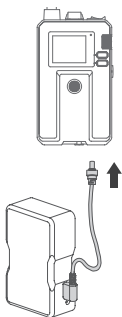


4. DMX Connection

 4.1 Wireless DMX

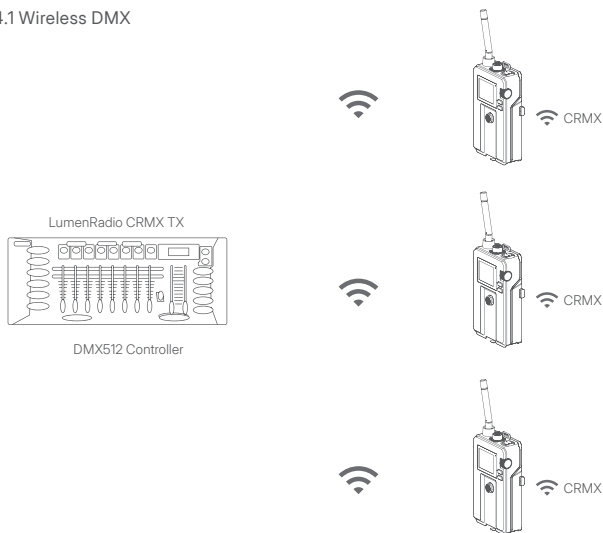

 4.2 Wired DMX

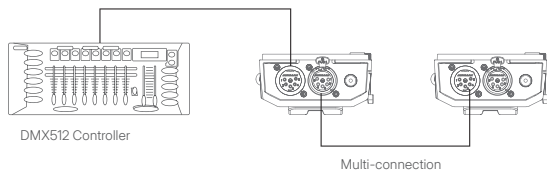

Note: The DMX512 connection is for illustration only, the controller and connecting cable are sold separately.

5. Control Panel Operation

Components	Operation	Description
MODE Button	Short press	Enter Luminousness adjust interface
Adjustment Lever	Switch up / down	Increase / Decrease Luminousness (0% ~ 100%)
MENU Button	Short press	Enter menu interface
SET Dial	Rotate	Switch Options or Increase / Decrease Parameter Values
	Short press	Confirm Selection or Exit Current Settings

6. MENU Settings

Press the MENU button to enter menu interface, rotate and press the SET dial to enter and adjust the following setting options

Icon	Function	Options		Description
	Type	AD33		Set the model of the connected diffusion
		AD32		
		AD21		
		AD88		
	DMX	Address	001-512	Start Address
		DMX Mode	01: Level 8 Bit	8-bit Level mode
		RDM Status	On	Enable RDM. The console can set the fixture address and DMX mode.
			Off	Disable RDM
		Extend DMX CH	On	Enable Ext-Channels signal
			Off	Disable Ext-Channels signal
	CRMX	CRMX	On	Enable CRMX
			Off	Disable CRMX
		Reset		Reset CRMX
		Status		/
	Bluetooth	On		Enable Bluetooth
		Off		Disable Bluetooth
		Reset		Reset Bluetooth
		MAC		For easy device identification
	Speed	1-4 gear		/
	Frequency	Default		/
		1-5 gear		
	Display	Brightness: 10%-100%		/
	Language	简体中文		Set interface language
		English		
	Version& Upgrade	/		Upgrade via the "Godox Light" app
	Factory Reset	Apply		Restore all parameters to factory defaults.
		Cancel		/
	Fixture Info	/		View Model, Firmware Version, etc.

7. "Godox Light" App Connection Guide

Scan the QR code or search for "Godox Light" in the App Store to download.



Bluetooth Reset

Go to Menu > Bluetooth > Reset (and confirm).

Bluetooth Pairing

Open the App, select "Add Bluetooth", then search for and connect the device.

Firmware Upgrade

In the App device list, tap the  and select "Firmware Upgrade". The App will automatically check for new versions. Follow the on-screen instructions.

Technical Data

Product Name	Adjustable Diffusion
Product Model	AD88
Controller Input	12 V - 20 V $\equiv$ 35 W
Controller Output	0 V - 54 V $\sim$
Control Methods	DMX / RDM, CRMX, App, Controller
Bluetooth Control Distance	Max. 30 m
Controller Operating Temperature	-20°C $\sim$ 45°C
Dimensions (without butterfly frame)	Diffusion: 2300 $\times$ 2300 mm
	Controller: 83 $\times$ 46 $\times$ 150 mm
Net Weight (without butterfly frame)	Diffusion: $\approx$ 3.7 kg
	Controller: $\approx$ 287 g

Note: Product design and specifications are subject to change without notice.

Maintenance

- Power off and disconnect the power supply before cleaning. Use a dry, soft cloth only. Strictly do not use alcohol, benzene, or other volatile solvents.
- Ensure the device has cooled down completely and all cables are disconnected before storage. Store in a dry, well-ventilated environment away from strong magnetic fields.

Warning

Operating frequency:2402MHz – 2480MHz(2.4G only receive)/2402MHz – 2480MHz (BT)
Maximum EIRP Power:5dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The use distance is not more than 5mm.

IC Warning

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes RSS exemptées de licence d'Innovation, Sciences et Développement économique Canada. L'exploitation est soumise aux deux conditions suivantes:

- (1) Cet appareil ne peut pas causer d'interférences, et
- (2) Cet appareil doit accepter toute interférence, y compris celles qui pourraient entraîner un fonctionnement accidentel de l'appareil.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Tout changement ou modification non expressément approuvé par la partie responsable de la réglementation de l'OCDE peut faire perdre à l'utilisateur le droit d'utiliser l'appareil.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Remarque: cet appareil a été testé pour répondre aux limites des appareils numériques de classe B conformément à la partie 15 des règles de la Federal Communications Commission des États - Unis. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans les installations résidentielles. L'appareil génère de l'énergie RF utilisée et rayonne, ce qui peut causer des interférences nocives pour les communications radio s'il n'est pas installé et utilisé conformément aux instructions. Cependant, aucun Garantie contre les interférences dans une installation spécifique. Si l'appareil cause des interférences nuisibles à la réception de la radio ou de la télévision, qui peuvent être déterminées en éteignant et en allumant l'appareil, l'utilisateur est encouragé à tenter de corriger les interférences par une ou plusieurs des mesures suivantes:

- redirection ou repositionnement de l'antenne de réception.
- augmenter l'espacement entre l'appareil et le récepteur.
- Connecter l'appareil à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- consultez votre revendeur ou un technicien radio / tv expérimenté pour obtenir de l'aide.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Avvertimento RF per gli apparecchi portatili:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences. Équipement Peut être utilisé sans restriction dans des conditions d'exposition portables.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条形码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》（见后面说明）所列产品，其他非属此范围的产品或部件（如促销品、赠品及其他出厂后附加的部件等）不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超出保修期；②因不当使用、维护或保管导致的损坏，如：不当搬运；未按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③非神牛授权机构或人员安装、修理、更改、添加或拆卸导致的损坏；④产品或部件原有识别信息被修改或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件导致的损坏；⑦因不可抗力或意外事故导致的损坏；⑧其他非产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。不在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

部件	保修期（月）	保修服务类型
内部电路板	12	客户送修
其他（可调柔光片、光效附件、各类线材、包装等）	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Parts	Maintenance Period (month)	Warranty Service Type
Internal circuit board	12	Customer sends the product to designated site
Other items (optical accessories, cables, package, etc)	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062



Wechat
Official Account
神牛微信公众号

制造商：深圳市神牛摄影器材有限公司

地址：深圳市宝安区福海街道塘尾社区耀川工业区厂房 2 栋

电话：+86-755-29609320 (8062) 传真：+86-755-25723423

邮箱：godox@godox.com 网址：godox.com

MANUFACTURER: GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street,
Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320 (8062)

Fax: +86-755-25723423 E-mail: godox@godox.com Website: godox.com



合格证
QC PASS

Copyright © 2026 Godox All Rights Reserved.

中国制造 Made in China